


Artifeel

Installation instructions for the Check'In alarm box
with the Check'in APP

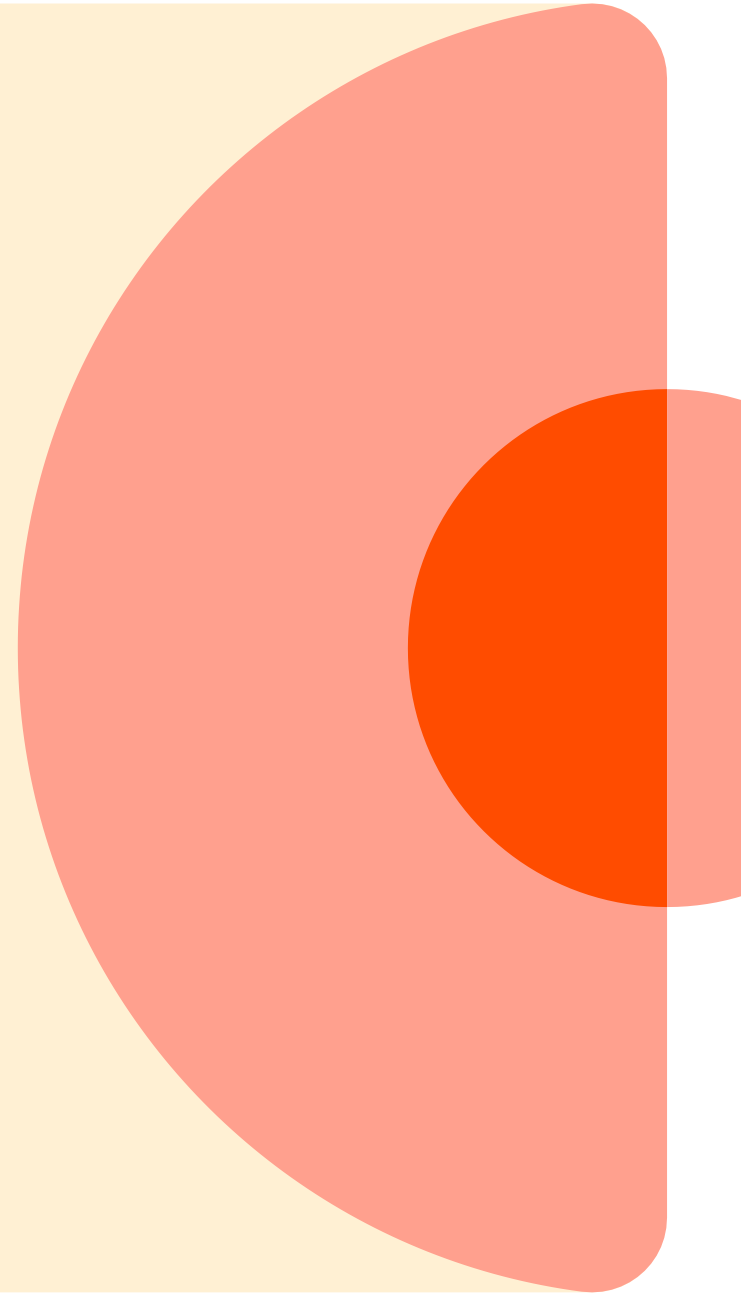

Step 1: Download the Check'In app


Pro App for Android Download Link:

<https://play.google.com/store/apps/details?id=com.artifeel.checkin>

Pro App for iOS Download Link:


<https://apps.apple.com/fr/app/checkin-by-artifeel/id1622611197>

If you can't click on the link, search for Artifeel in the search engine of the Play Store or App Store and then select the "Check'In" app

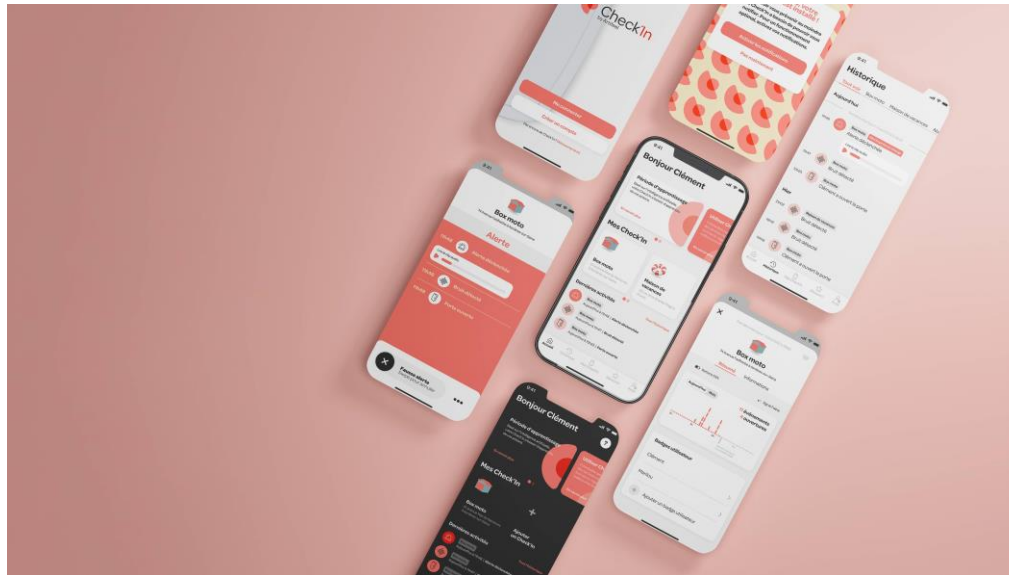


Step 2: Creation of the user account


Once the app is downloaded, you need to create an account if you haven't already.

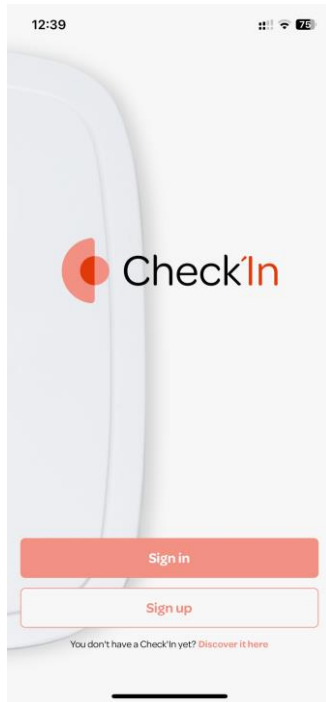

Click on "Sign up"

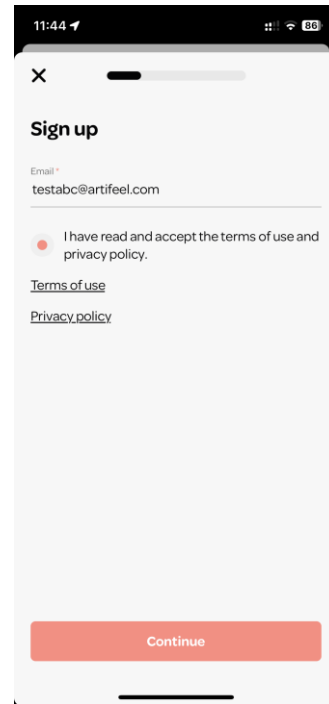

Enter an email address and tick the box in the T&Cs

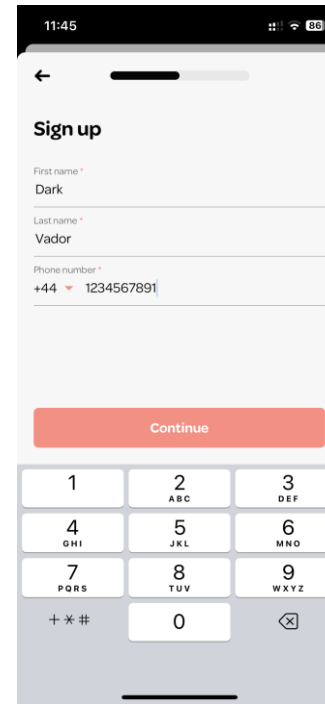

Enter first name, last name and mobile phone number




Create an 8-character password with an uppercase, lowercase, a number, a special character.


Step 3: Adding Check'In to the app

Now you have to add the Check'In in the app.


⚠ Be careful not to insert the batteries before the app asks for it ⚠

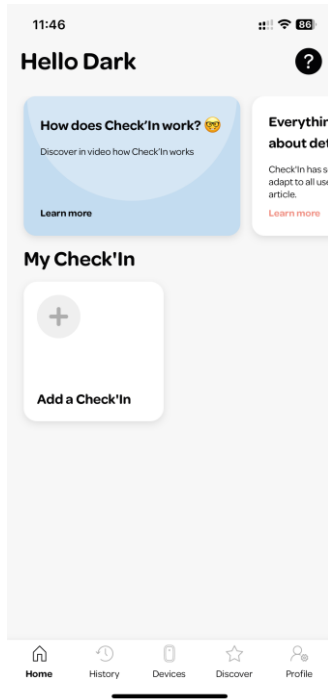


Click on "Add a Check'In"

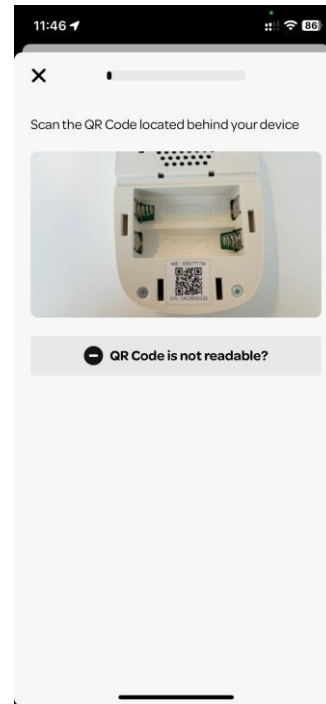

Scan the QR code on the back of the Check-In

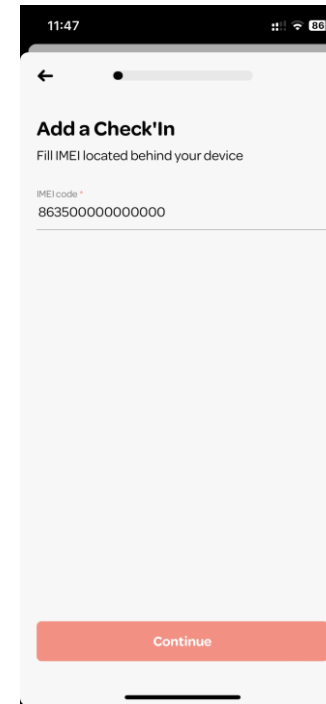

Click Continue

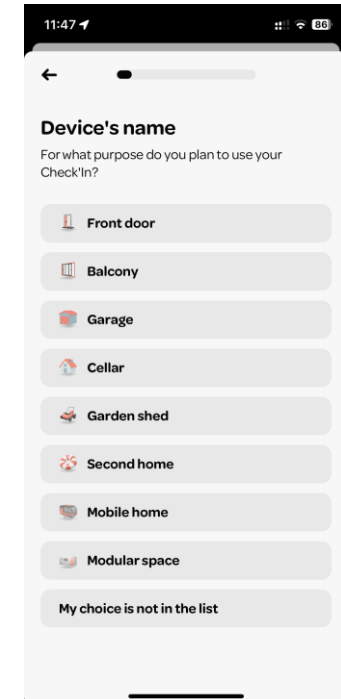


Give a Name to the device or select a pre-configured name


Step 3: Adding Check'In to the app

Now you have to add the Check'In in the app.


⚠ Be careful not to insert the batteries before the app asks for it ⚠

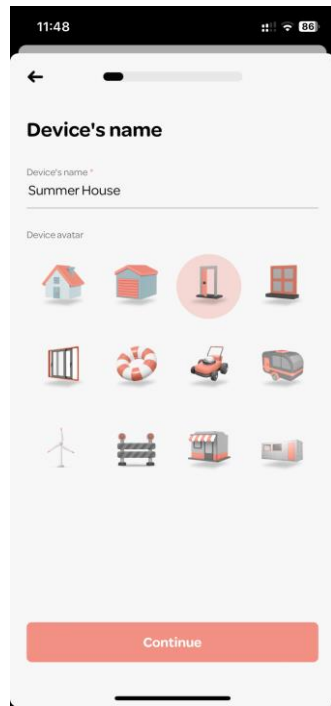


Fill in a clear name as the name of the Check'In. Ex "Summer House"

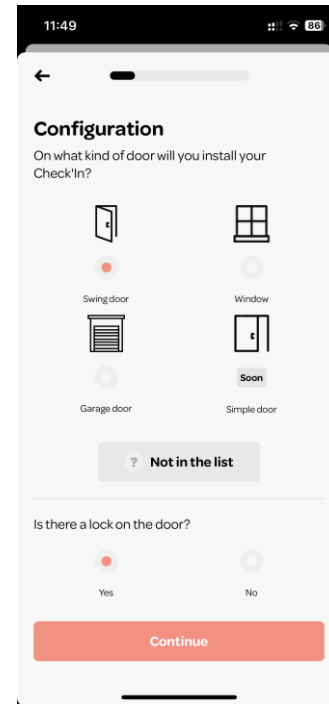

Select the type of door.
In the general case, just click next.

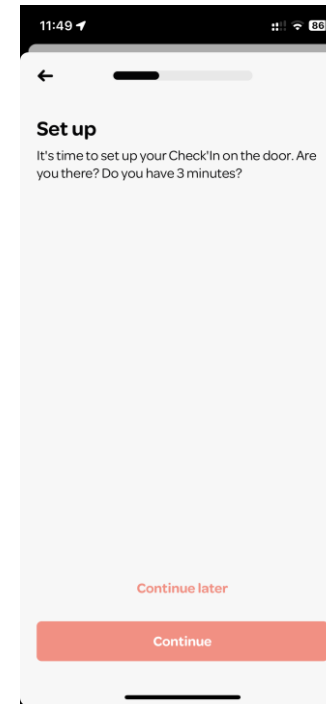

Click Continue

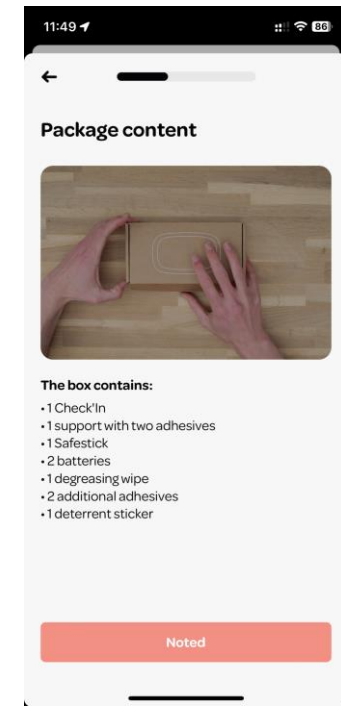


This video describes the contents of the pack


Step 3: Adding Check'In to the app

Now you have to add the Check'In in the app.

⚠ Be careful not to insert the batteries before the app asks for it ⚠

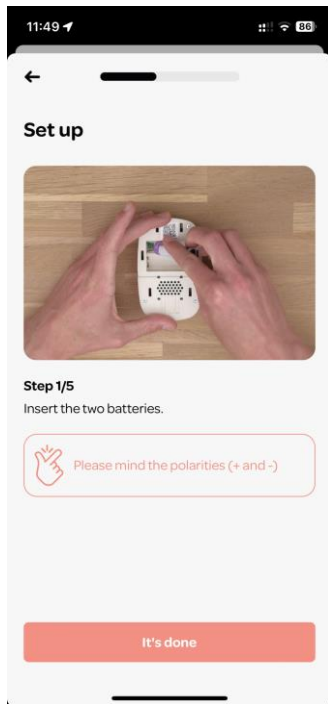


Insert the batteries into the Check'In, respecting the polarity.

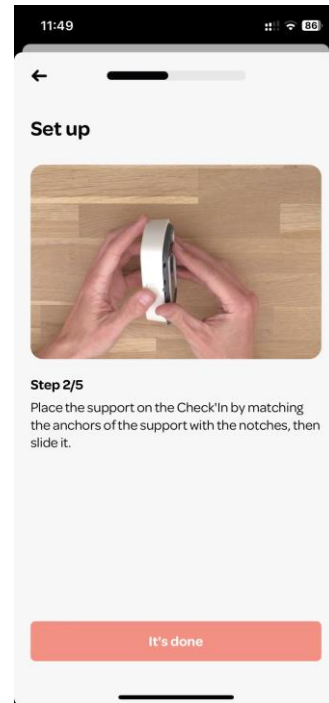

Scan the QR code on the back of the Check-In



Click Continue

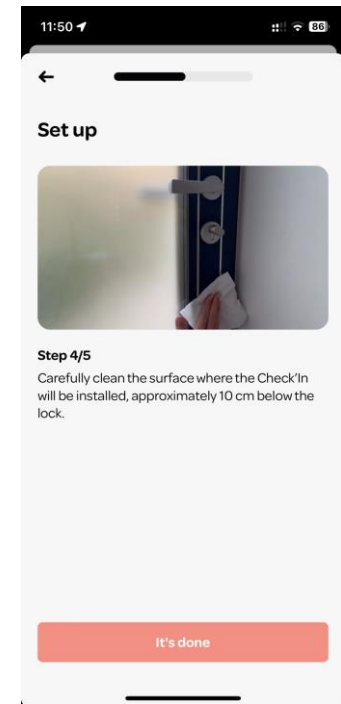

Thoroughly clean the surface before attaching the Check'In

Step 4: Installing the Check'In on the door

Once the steps explained in the video have been done (inserting the batteries, assembling the bracket and the SafeStick), it is necessary to proceed with the attachment of the Check'In to the door.


1. Place the Check'In as shown in the photo on the right about 20 cm from the lock, above the handle so that a key ring cannot hit the box for example.
2. Clean the Check'In installation area well with the wipe provided.
3. Remove adhesive guards
4. Secure the Check'In vertically and press firmly for 15 seconds

⚠ It is very important to clean the installation area well and press firmly for 15 seconds to ensure that Check'In is properly attached to the door.




Step 5: Check-In Login


All that remains is the connection of the Check'In, the calibration and the addition of an address to finalize the installation.

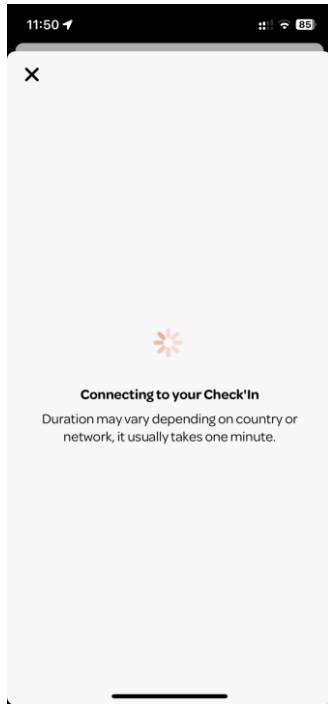

Once the video steps have been completed, the login screen will appear.

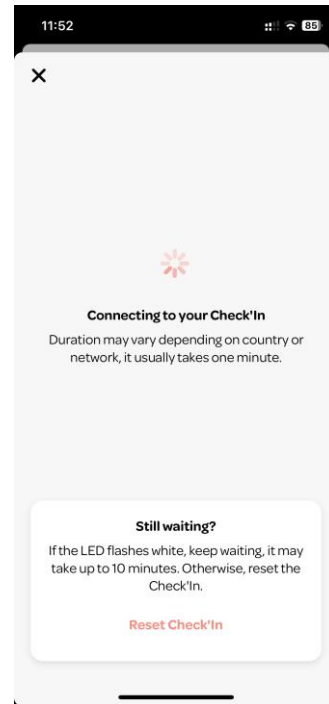


In rare cases, it may take a few minutes to connect. As long as the white LED is blinking slowly, the box is looking for a network.

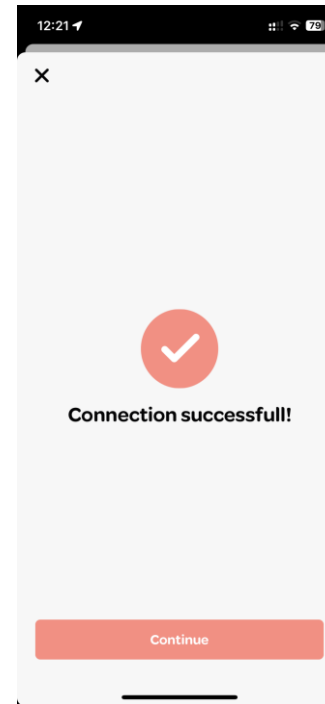


Click Continue

Step 6: Sensor activation and calibration (1/2)


Now it's time to activate the Check'In sensors and perform the calibration
This step is carried out with the door closed

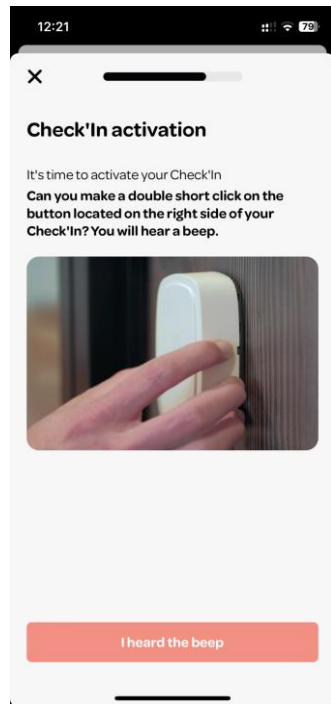


Press the Check-In button twice.
The door must be closed when activating.

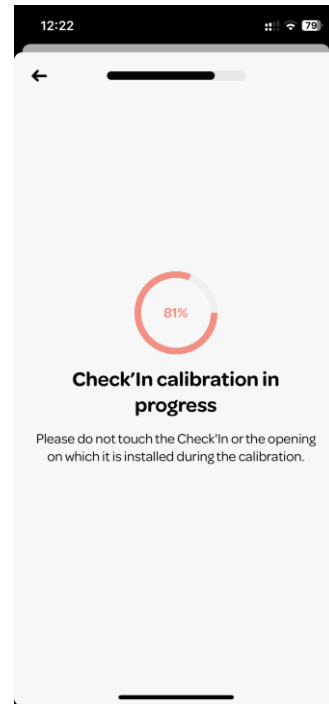

Once the sensors are activated, calibration begins.
Please do not touch the door or the Check'In.

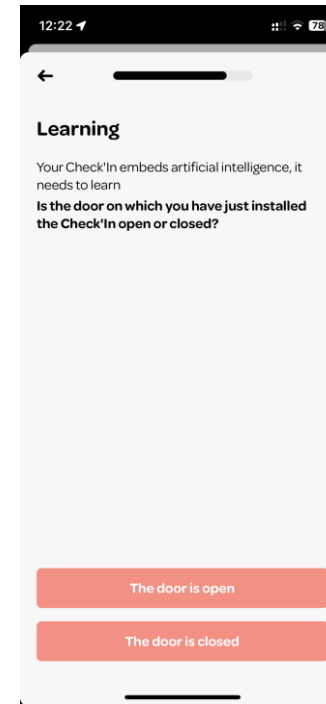


Click on the button that corresponds to the situation

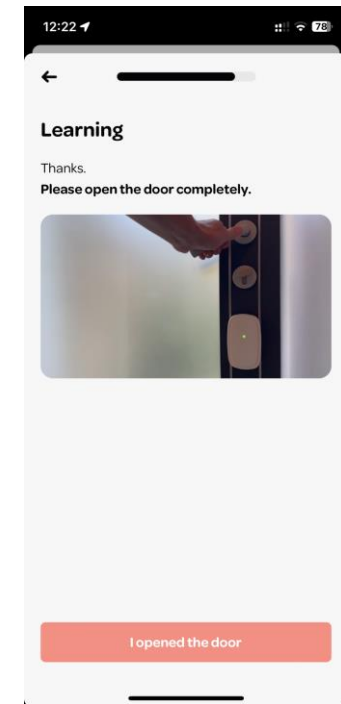


Perform a full opening of the door

Step 6: Sensor activation and calibration (2/2)

Now it's time to activate the Check'In sensors and perform the calibration
This step is carried out with the door closed

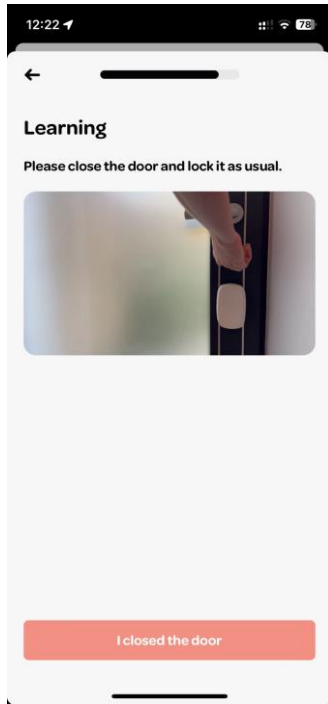


Now close the door and lock it

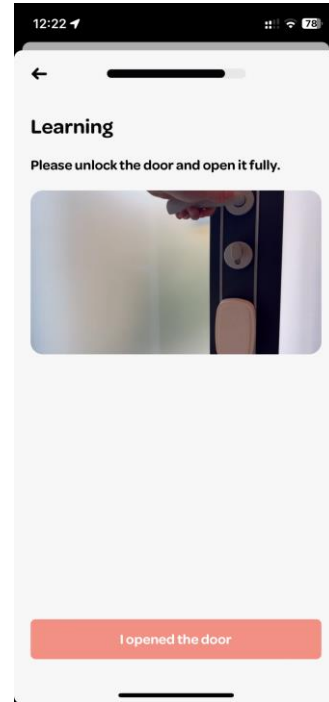


Unlock the door and open it wide.

Step 7: Address


It is necessary to enter the installation address of the Check'In so that the remote monitoring has all the necessary information in the event of an alert.

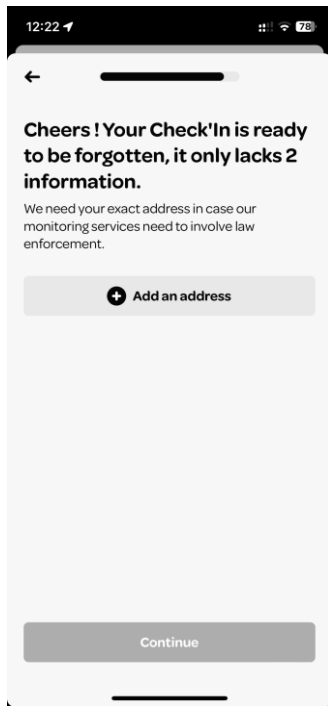


Click on "Add Address"

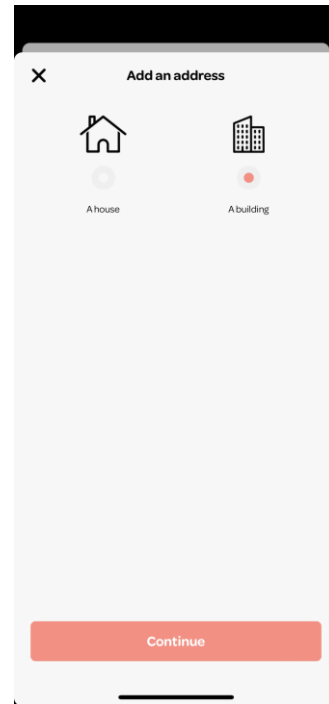

Select House or Apartment as applicable

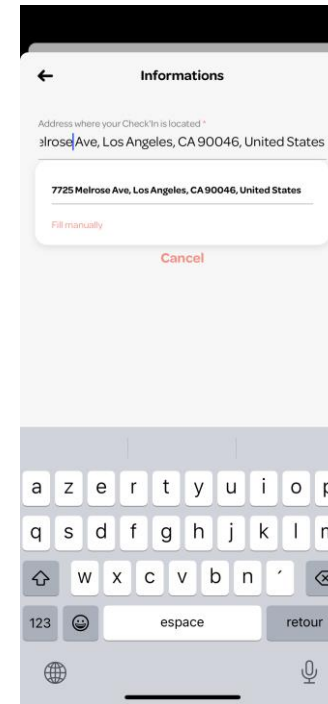


Start typing the address and select it from the list when it appears. If you can't find it, click "Fill in manually"

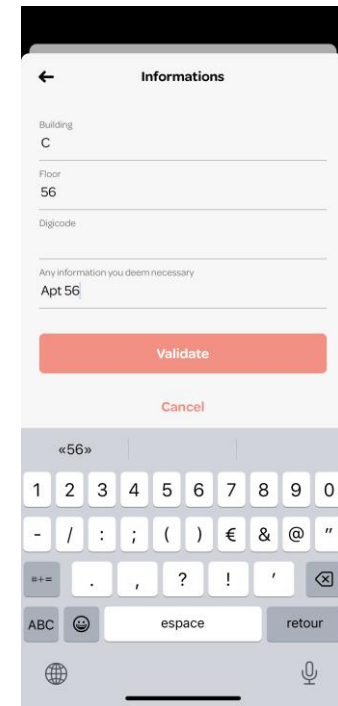


Fill in the additional information (building, floor, etc.)

Etape 8 : Emergency contacts




Emergency contacts are the people who will receive an SMS and who will be called by remote monitoring in the event of an alert. You can add two of them (in addition to the account of the person who installs the Check'In, which is the default emergency contact).

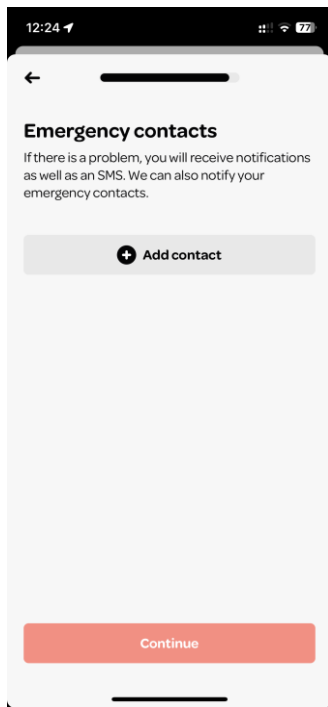

Click on "Add Emergency Contact"

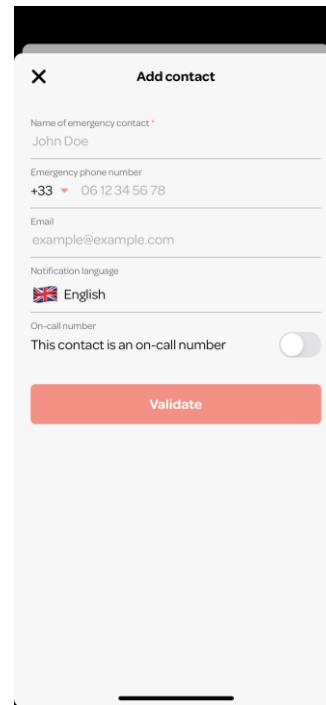

Fill in the name and phone number of the emergency contact

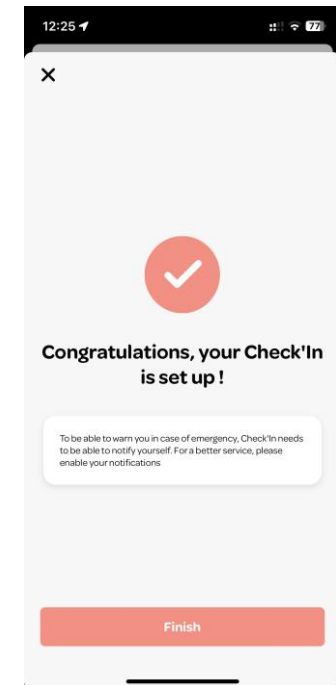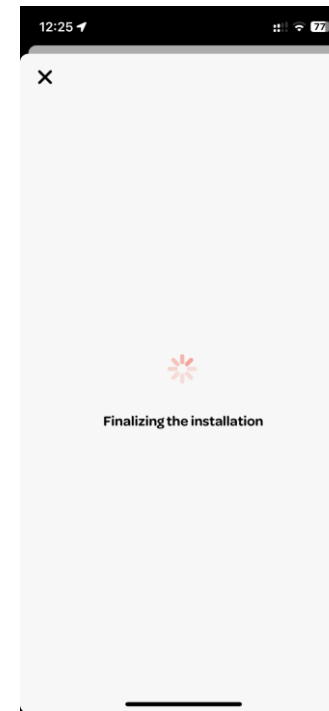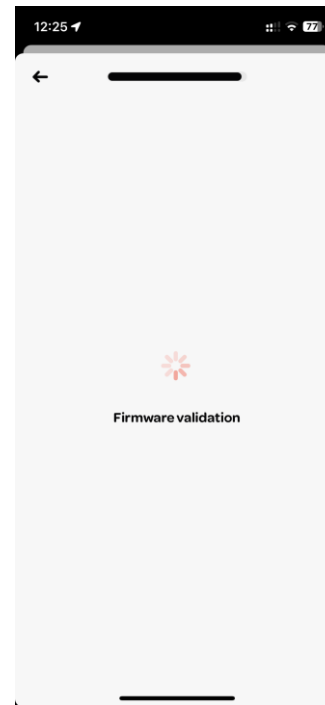

Once the emergency contacts are added, the installation is complete

Explanation of the Check'In LEDs / Additional information

LED Behavior	Explanations
LED blanche breathing	The Check'In looks for a network connection
Green LED	The sensor detected a vibration
Breathable blue LED	Bluetooth is enabled on the sensor
White LED flashes every 5 seconds	The Check'In is connected to the network and sends data

For more information about Check'In you can consult <https://support.artifeel.com/hc/fr>

Explanation of the Check'In button

Press button	Action
Simple press	Siren shutdown (if test mode activated)
Dual Tap	Sensor activation (only at start-up)
Triple Tap	Connectivity Testing (Cloud Connection)
Long press 3 seconds	Bluetooth activation (for Check'In update)
Long press 9 seconds	Reset of the Check'In

For more information about Check'In you can consult <https://support.artifeel.com/hc/en-gb>

Artifeel
secure • smart • easy

